

FSD

audio

- FSD MASTER DB 3.5K
- FSD MASTER DB 5.5K
- FSD MASTER DB 8.5K

CAR POWER AMPLIFIER

Safety precautions

▲ WARNING

To prevent injury or fire, take the following precautions:

- Mounting and wiring this product requires skills and experience. For safety's sake, leave the mounting and wiring work to professionals.
- When extending the ignition, battery, or ground wires, make sure to use automotive-grade wires or other wires with the range of 8 mm² (AWG 0) or more to prevent wire deterioration and damage to the wire coating.
- To prevent a short circuit, never put or leave any metallic objects (such as coins or metal tools) inside the unit.
- If the unit starts to emit smoke or strange smells, turn off the power immediately and consult your supplier.
- Do not touch the unit during use because the surface of the unit becomes hot and may cause burns if touched.

▲ CAUTION

To prevent damage to the machine, take the following precautions:

- Be sure the unit is connected to a 12V DC power supply with a negative ground connection.
- Do not open the top or bottom covers of the unit.
- Do not install the unit in a spot exposed to direct sunlight or excessive heat or humidity. Also avoid places with too much dust or the possibility of water splashing.

NOTE

- If you experience problems during installation, consult your supplier.
- If the unit does not seem to be working right, consult your supplier.

Cleaning the unit

If the front panel gets dirty, turn off the power and wipe the panel with a dry silicon cloth or soft cloth.

▲ CAUTION

Do not wipe the panel with a hard cloth or a cloth dampened by volatile solvents such as paint thinner and alcohol. They can scratch the surface of the panel and/or cause the indicator letters to peel off.

To prevent battery rise

When the unit is used in the ACC ON position without turning the engine ON, it depletes the battery. Use it after starting the engine.

Protection function

The protection function is activated in the following situations:

This unit is equipped with a protection function for protecting this unit and your speakers from various accidents or problems that can occur.

When the protection function is triggered, the power indicator goes off and the amplifier stops operating.


- When a speaker wire may be short-circuited.
- When a speaker output contacts ground.
- When the unit malfunctions and a DC signal is sent to the speaker output.
- When the internal temperature is high and unit won't operate.

■ Speaker selection

Using speakers with smaller input ratings than the amplifier's output power would result in smoke generation or equipment failure.

The impedance of the speakers that are going to be connected should be 1Ω or greater. When more than one set of speakers are going to be used, calculate the combined impedance of the speakers and then connect suitable speakers to the amplifier.

<Example>

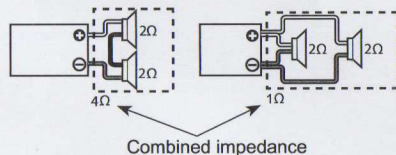


Safety precautions

■ Wiring

- Take the battery wire for this unit directly from the battery. If it's connected to the vehicle's wiring harness, it can cause blown fuses etc.
- If a buzzing noise is heard from the speakers when the engine is running, connect a line noise filter (optional) to each of the battery wire.
- Do not allow the wire to directly contact the edge of the iron plate by using Grommets.
- Connect the ground wire to a metal part of the car chassis that acts as an electrical ground passing electricity to the battery's negative ⊖ terminal. Do not turn the power on if the ground wire is not connected.
- Be sure to install a protective fuse in the power cord near the battery. The protective fuse should be the same capacity as the unit's fuse capacity or somewhat larger.
- For the power cord and ground, use a vehicle type (fireproof) power wiring cord. (Use a power wiring cord with the range of 8 mm² (AWG 0) or more.)
- When more than one power amplifier are going to be used, use a power supply wiring wire and protective fuse of greater current-handling capacity than the total maximum current drawn by each amplifier.

▲ WARNING

Particular attention must be given to making good electrical contact at the amplifier-output and speaker terminals. Poor or loose connections can cause sparking or burning at the terminals because of the very high power that the amplifier can deliver.

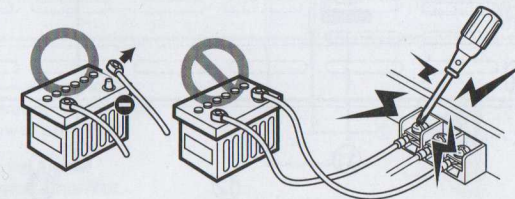

▲ CAUTION

- If sound is not output normally, immediately turn power off and check connections.
- Be sure to turn the power off before changing the setting of any switch.
- If the fuse blows, check wires for shorts, then replace the fuse with one of the same rating.
- Check that no unconnected wires or connectors are touching the car body. Do not remove caps from unconnected wires or connectors to prevent short circuits.
- Connect the speaker wires to appropriate speaker connectors separately. Sharing the negative wire of the speaker or grounding speaker wires to the metal body of the car can cause this unit to fail.
- After installation, check that the brake lamps, turn signal lamps and windshield wipers work properly

Connection

■ Installation procedure

Since there are large variety of settings and connections possible according to applications, read the instruction manual well to select the proper setting and connection.


1. Remove the ignition key and disconnect the negative ⊖ terminal of the battery to prevent short circuits.
2. Set the unit according to the intended usage.
3. Connect the input and output wires of the units.
4. Connect the speaker wires.
5. Connect the power wire, power control wire and grounding wire following this order.
6. Install the installation fittings in the unit.
7. Attach the unit.
8. Connect the negative ⊖ terminal of the battery.

▲ CAUTION

- Do not install in the below locations; (Unstable location, In a location that interferes with driving, In a location that gets wet, In a dusty location, In a place that gets hot, In a place that gets direct sunlight, In a location that gets hit by hot air)
- Do not install the unit under the carpet. Otherwise heat build-up occurs and the unit may be damaged.
- Install this unit in a location which allows heat to easily dissipate. Once installed, do not place any object on top of the unit.
- The surface temperature of the amplifier will become hot during use. Install the amplifier in a place where people, resins, and other substances that are sensitive to heat will not come into contact with it.
- When making a hole under a seat, inside the trunk, or somewhere else in the vehicle, check that there is nothing hazardous on the opposite side such as a gasoline tank, brake pipe, or wiring harness, and be careful not to cause scratches or other damage.
- Do not install near the dashboard, rear tray, or air bag safety parts.
- The installation to the vehicle should securely fasten the unit to a place in which it will not obstruct driving. If the unit comes off due to a shock and hits a person or safety part, it may cause injury or an accident.
- After installing the unit, check to make sure that electrical equipment such as the brake lamps, turn signal lamps and windshield wipers operate normally



Product function description diagram

■ FSD MASTER DB 5.5K ■ FSD MASTER DB 8.5K

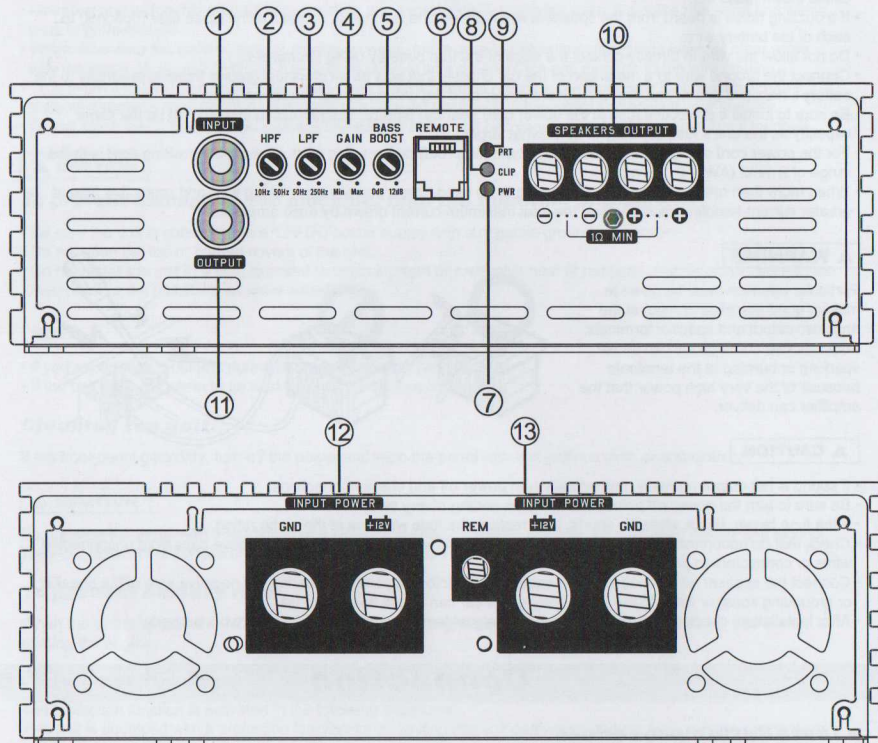


- | | |
|--|----------------------------|
| 1 Audio Signal Input | 7 Power indicator |
| 2 High Pass Frequency Range Regulation | 8 CEPP0 light |
| 3 Low Pass Frequency Range Regulation | 9 Protection Light |
| 4 Volume Regulator | 10 Speaker Output Terminal |
| 5 Bass Boost Regulator | 11 Audio Signal output |
| 6 Remote Bass Control | 12 13 Power Input Terminal |

Product connection diagram

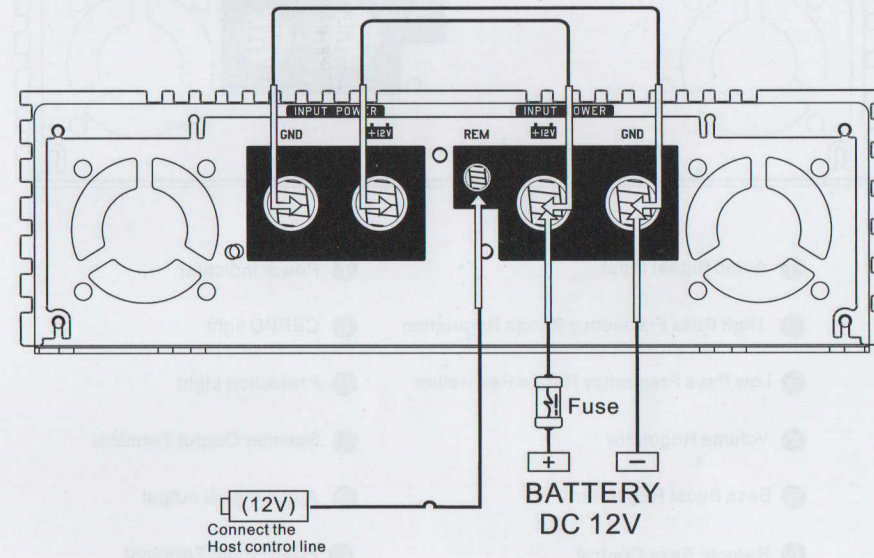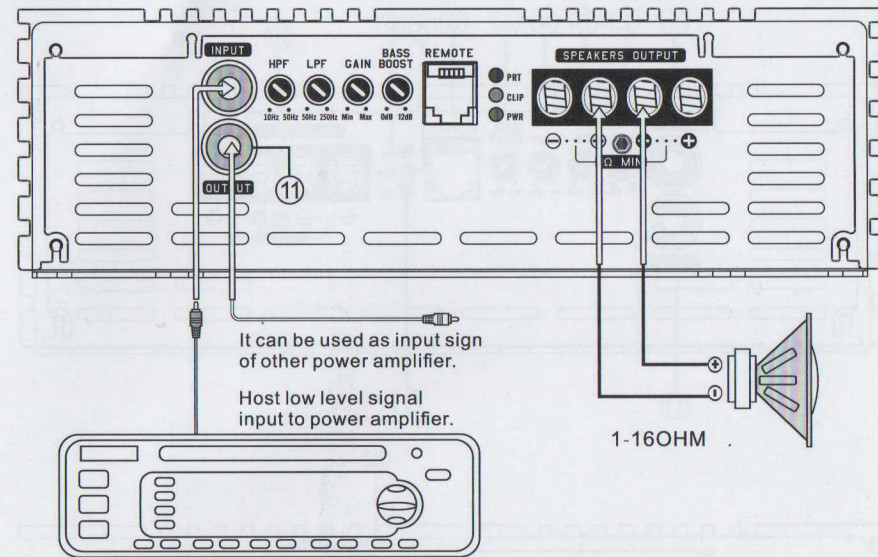



Product function description diagram

■ FSD MASTER DB 3.5K

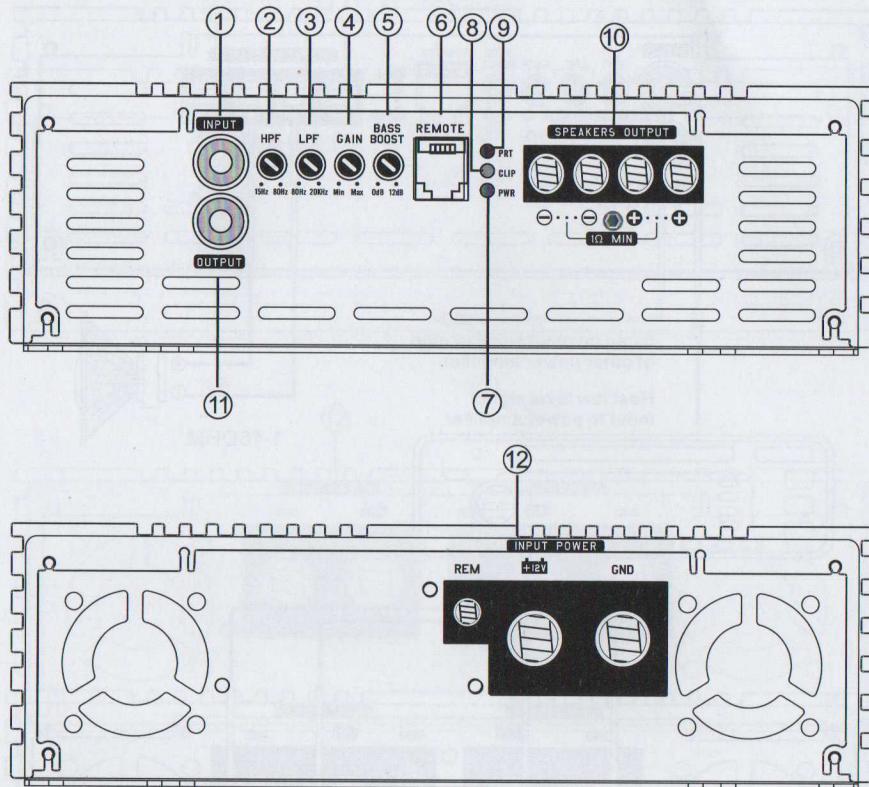

- | | |
|--|----------------------------|
| 1 Audio Signal Input | 7 Power indicator |
| 2 High Pass Frequency Range Regulation | 8 CEPPPO light |
| 3 Low Pass Frequency Range Regulation | 9 Protection Light |
| 4 Volume Regulator | 10 Speaker Output Terminal |
| 5 Bass Boost Regulator | 11 Audio Signal output |
| 6 Remote Bass Control | 12 Power Input Terminal |

Product connection diagram

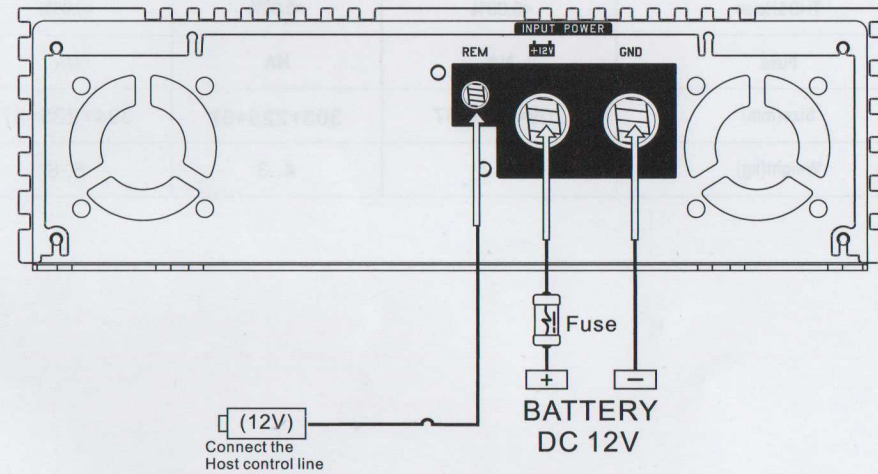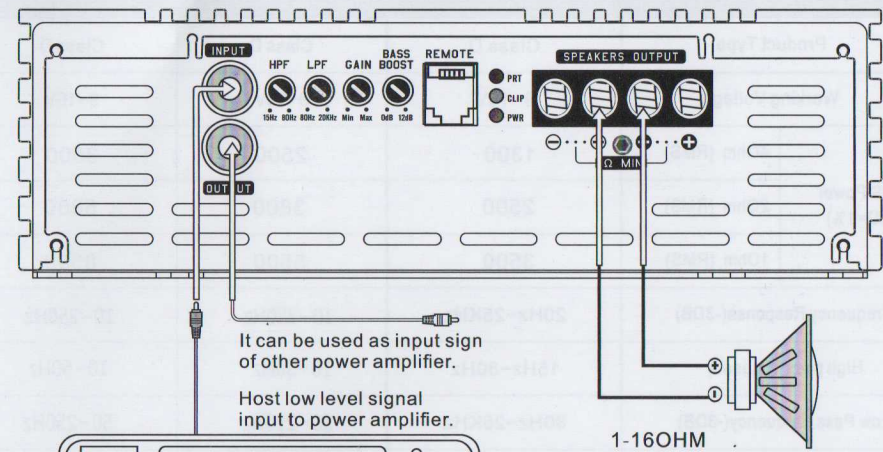

Product technical parameter

Model		FSD MASTER DB 3.5K	FSD MASTER DB 5.5K	FSD MASTER DB 8.5K
Product Type		Class D	Class D	Class D
Working Voltage		9~16V	9~16V	9~16V
RMS Power (THD=1%)	40hm (RMS)	1300	2500	3500
	20hm (RMS)	2500	3800	5800
	10hm (RMS)	3500	5500	8500
Frequency Response(-3DB)		20Hz~25KHz	10~250Hz	10~250Hz
High pass frequency		15Hz~80Hz	10~50Hz	10~50Hz
Low Pass Frequency(-3DB)		80Hz~25KHz	50~250Hz	50~250Hz
Raise the frequency of low pass		0~15DB	0~15DB	0~15DB
Bass Boost		49Hz	49Hz	49Hz
Signal To Noise Ratio		>90DB	>90DB	>90DB
Input Sensitivity		0.3~6V	0.3~6V	0.3~6V
THD&Noise		<0.03%	<0.03%	<0.03%
Fuse		NA	NA	NA
Size(mm)		209*225*67	303*225*67	394*225*67
Weight(kg)		3.2	4.3	5.8